

SetPro

TJ-U62 Dual Channels Isolated Signal Converter RS-485 COMMUNICATION INSTRUCTION MANUAL MODBUS Protocol Reference Guide

Modbus Protocol Register Address :

Address	Code	Word	Function	Range
0000H	03H	1	Channel 1 Data Number	0000H ~ 0FFFH
0001H	03H	1	Channel 2 Data Number	0000H ~ 0FFFH
0002H	03H	1	Channel 3 Data Number	0000H ~ 0FFFH
0003H	03H	1	Channel 4 Data Number	0000H ~ 0FFFH
0004H	03H	1	Channel 5 Data Number	0000H ~ 0FFFH
0005H	03H	1	Channel 6 Data Number	0000H ~ 0FFFH
0006H	03H	1	Channel 7 Data Number	0000H ~ 0FFFH
0007H	03H	1	Channel 8 Data Number	0000H ~ 0FFFH

Ex : 讀取第一站 通道 3 ~ 通道 6 資料


Send : 01 03 00 02 00 04 CRC

Received : 01 03 08 XX XX XX XX XX XX XX XX CRC

1 ~ 6 channel : PT-100 Ω Input (PT I)

7 ~ 8 channel : Analog Input (AI)

指撥開關 :

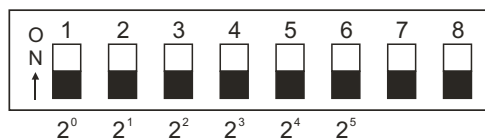

1~6 Pin 設定位址 : 01H ~ 3FH

7 Pin 設定通訊格式 : OFF \rightarrow N.8.1

ON \rightarrow N.8.2

8 Pin 設定飽率 : OFF \rightarrow 9600

ON \rightarrow 19200

A/D : 12 bit

