Download Indusoft program to GX (Network)

Step1: 在 GX 目錄下 Storage Card 建立目錄 Indusoft.

Step2: copy C:\Program Files\Indusoft Web Studio v6.0\Redist\Wince 4.0\armv4\Bin\CEServer.exe 到 Indusoft 目錄下。

Step3: GX 執行 CEServer.exe.

Step4: Indusoft 執行 Execution Environment.



Remote Agent (v4.7)	×
Connection status:	
Not connected to remote client	
Log:	
Cannot start Runtime application.	A
	-
Device connection via Network (TCP/IP)	S <u>e</u> tup
	<u>S</u> tart
Local IP: 192.168.1.228	E <u>x</u> it

Step5: 使用 Network 連線,設定 GX, IP 位址。

Execution Environment	×
Target Application Import CE License Target Station ● Local ● ● Metwork(P: 192.168.1.228 ● ● ● Serial Port: COM1 ▼ Advanced ● Microsoft ActiveSync	Connect Status: Platform: Install system files
	Close

Execution Environment	×
Target Application Import CE License	,
Target Station C Local Metwork IP: 192.168.1.228 Serial Port: COM1 Advanced Microsoft ActiveSync	Connect Disconnect Status: Connected to the remote device (CEView not Platform: WINCE 4.2 + ARMV4 Install system files Only newer files
	Close

Step6: 執行 Install system files. 下載 Bin, Drv 資料夾。

	檔案(E) 編輯(E) 檢視(⊻) 移至(G) 我的最愛(A)	
	網址 Storage Card\Indusoft	
	۱	
	CEServer Bin Drv	
Step8: 下載程式	Execution Environment	×
	Target Application Import CE License	
	Application Path	
	Local: D:堵呈式\InduSoff\CEDemo\	
	Target VStorage Card VInduSoft/Bin/CEDemo	
	Send To Target Only newer files Status: Send File Stop	_
		Close

Step7: GX 目錄下 \Storage Card\ Indusoft 會多了 2 個資料夾。

Step9: 執行應用程式

Remote Agent (¥4.7)	×
Connection status:	
Log:	
CARDVINDUSOFT/BINVCEDEMO(web)/ tml was updated with success.	nain.h 🔺
Device connection via Network (TCP/IP)	S <u>e</u> tup
	<u>S</u> tart
Local IP: 192.168.1.228	E <u>×</u> it

Step10: 沒有 License 只能執行 2 小時.

