

Features

- USB(PC) to RS422 cable 2M.
- USB(PC) to Mitsubishi A/FX PLC.
- USB(PC) to Digital GP HMI.
- BUS powered from USB.
- Three LEDs Display the power and communicate status.
- USB drivers running under WinXP, Win2000, WinME and Win98




Connecting System:


a. PC (USB) to Mitsubishi A/FX PLC.



b. PC (USB) to Mitsubishi FX1S/FX1N/FX2N PLC

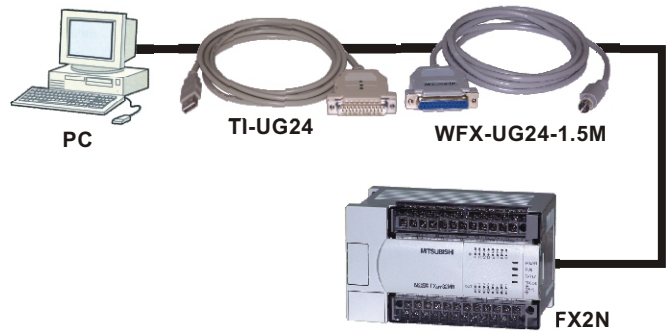

c. PC(USB) to Digital GP HMI.

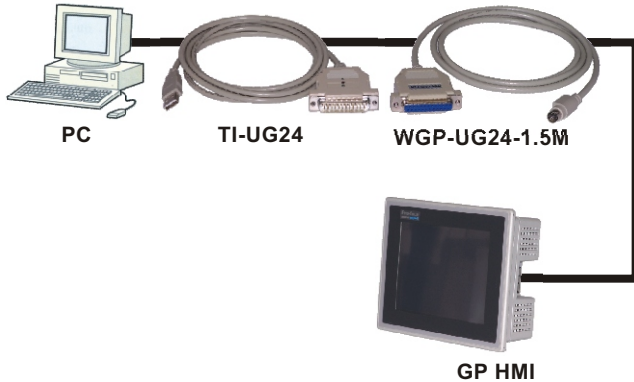

d. PC (USB) to RS422 devices.



Pin Assignments:

TI-UG24	各種 RS422 設備
(02) TX+	() RX+
(03) RX+	() TX+
(04) RTS+	() CTS+
(05) CTS+	() RTS+
(15) TX-	() RX-
(16) RX-	() TX-
(17) RTS-	() CTS-
(18) CTS-	() RTS-
(07) GND	() GND

轉接 Cable:

